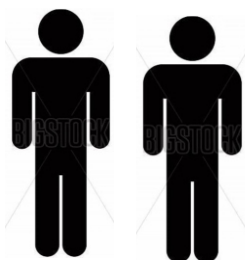
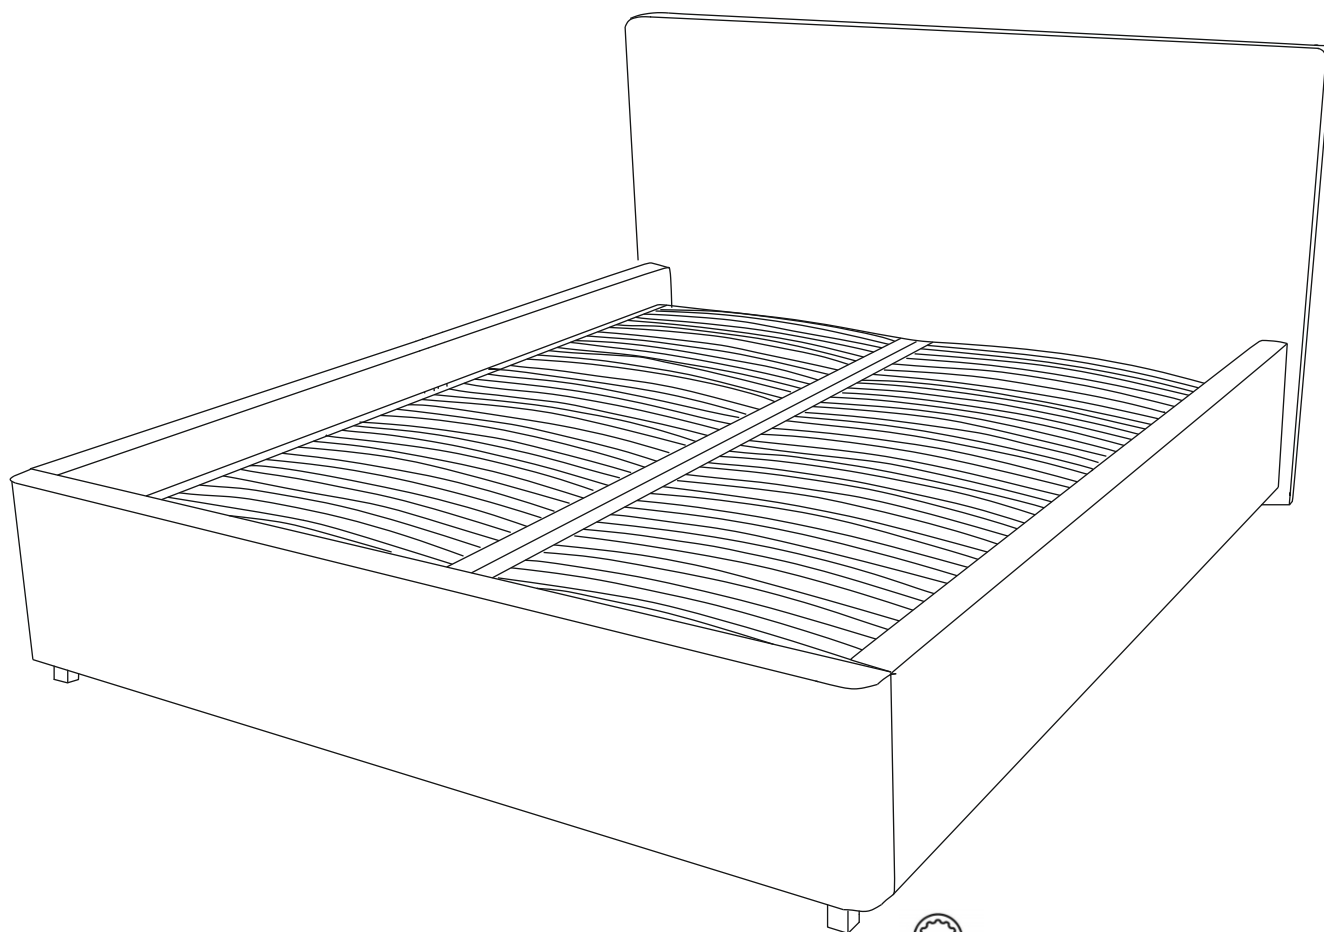


SWISS SENSE : Home 51

Polsterbett ohne Bettkasten

Gestoffeerd bed zonder opbergruimte

Upholstered bed without storage space



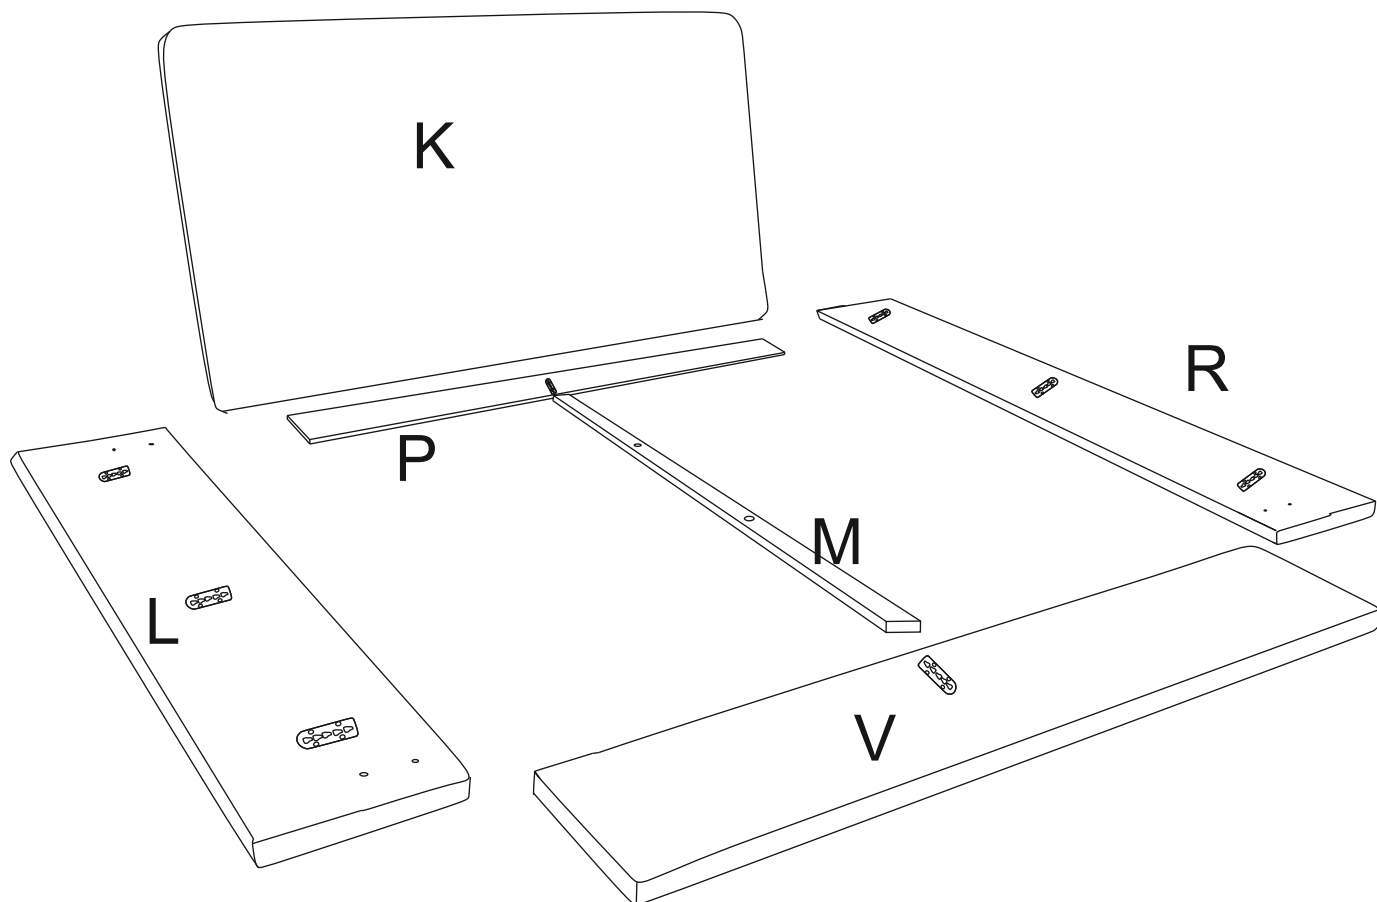
13 mm










4 mm



+



A 4x 	B 2x 	C 8x 	D 6x M6x20 
E 18x M6x40 	F 8x M6x60 	G 8x  4x20	H 1x  4 mm
I option:  etc.			

